

## **GPRS Standard Settings**

### **Settings' Name**

VF Live! GPRS

### **Homepage**

<http://live.vodafone.com>

### **Session Mode**

Permanent

### **Connection Security**

Off

### **Data Bearer**

GPRS

### **Bearer Settings**

#### **GPRS connection**

When needed

#### **GPRS Access Point**

live.vodafone.com.

#### **IP address**

010.202.002.060

#### **Authentication type**

Normal

#### **Login type**

Automatic

#### **Username**

(this is to be left blank)

#### **Password**

(this is to be left blank)

## **PXT Standard Settings**

### **Settings' Name**

Vodafone PXT

### **Homepage**

<http://pxt.vodafone.net.au/pxtsend>

### **Session Mode**

Permanent

### **Data Bearer**

GPRS

### **Bearer Settings**

#### **GPRS Access Point**

live.vodafone.com.

#### **IP address**

010.202.002.060

#### **Authentication type**

Normal

#### **Username**

(this is to be left blank)

#### **Password**

(this is to be left blank)